

MoTec Set-Up Instructions for Speed / Distance Channels

The following instructions are aimed at G50 & G55 drivers / teams to set up the laptop to enable Maps of Speed and Distance information to be generated correctly.

1. Load the M800 and the i2 software on the laptop.
2. Open the i2 program and browse to a previously saved data set. This can be a data set from an engine run-up in the workshop.
3. From the toolbar open **TOOLS** then **CHANNEL MAPPINGS** click **ADD** then select **GROUND SPEED** in the logged name (click the icon and browse for the name) and also type in the same analysis name.
4. Tick **OVERRIDE CHANNEL UNITS** then in the quantity select **SPEED** and set units to **KM/H**.
5. Close and re-open the data-set to allow the changes to take effect.
6. Open **TOOLS** then **CORRECTED SPEED AND DISTANCE**.
7. Select **CORRECTED SPEED** tab. In the box for channel 1 select **GROUND SPEED (Km/h)**.
8. Select **CORRECTED DISTANCE** tab. Tick **GENERATE CORR LAP DISTANCE CHANNEL**. Tick the 2 additional channels at the bottom of the screen.
9. Close and re-open the data set, again to allow the changes to take effect. The Corr Speed Channel should now work.

Issued by-
Alex Suggitt (07th June 2011)
Championship Co-Ordinator
For and on behalf of Ginetta Cars

Alex Suggitt
T-0113 3854146
F-0113 3854141
E- alex.suggitt@ginetta.com